

SmartSpace®

Location System Sync

From version 3.8.4

Copyright © 2023, Ubisense Limited 2014 - 2023. All Rights Reserved. You may not reproduce this document in whole or in part without permission in writing from Ubisense at the following address:

Ubisense Limited St Andrew's House St Andrew's Road Cambridge CB4 1DL United Kingdom

Tel: +44 (0)1223 535170

WWW: https://www.ubisense.com

All contents of this document are subject to change without notice and do not represent a commitment on the part of Ubisense. Reasonable effort is made to ensure the accuracy of the information contained in the document. However, due to on-going product improvements and revisions, Ubisense and its subsidiaries do not warrant the accuracy of this information and cannot accept responsibility for errors or omissions that may be contained in this document.

Information in this document is provided in connection with Ubisense products. No license, express or implied to any intellectual property rights is granted by this document.

Ubisense encourages all users of its products to procure all necessary intellectual property licenses required to implement any concepts or applications and does not condone or encourage any intellectual property infringement and disclaims any responsibility related thereto. These intellectual property licenses may differ from country to country and it is the responsibility of those who develop the concepts or applications to be aware of and comply with different national license requirements.

UBISENSE®, the Ubisense motif, SmartSpace® and AngleID® are registered trademarks of Ubisense Ltd. DIMENSION4™ and UB-Tag™ are trademarks of Ubisense Ltd.

Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries. The other names of actual companies and products mentioned herein are the trademarks of their respective owners.

Contents


Location system sync	1
Summary	1
Features	2
Benefits	2
Installing the Location system sync feature	3

Location system sync

Copy and update DIMENSION4 sensor locations and names into SmartSpace

Summary

With the Location system sync feature, any sensor created in <u>Location System Config</u> (LSC) is copied to SmartSpace as type Sensor. The name, position and label properties of each sensor are copied to SmartSpace and are automatically updated when they are edited in LSC. The feature does not allow for changes to be made to the Sensor in SmartSpace; any changes made in SmartSpace are discarded within a minute and reset back to the correct synchronized value that is stored in LSC. The Location system sync feature allows you to see your sensors on the SmartSpace Config map by assigning a representation to type Sensor, allowing you to configure your space effectively by seeing where the sensors are in relation to any objects placed on the map.

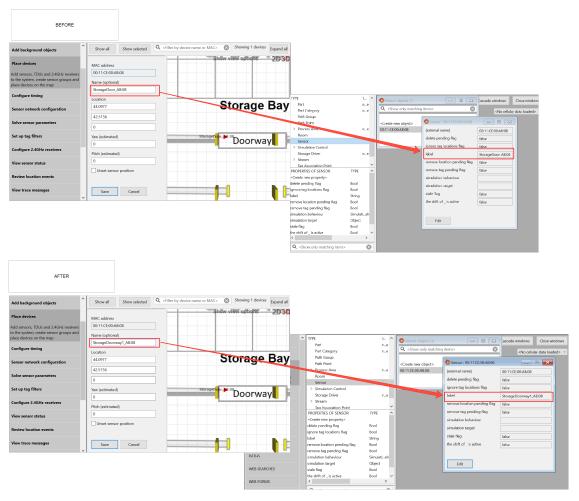

Features

Location system sync includes the following capabilities:

- DIMENSION4 sensors appear as Sensor instances in SmartSpace
- Changes made in LSC are reflected immediately in SmartSpace
- Sensors in SmartSpace can be assigned a representation
- Sensors can be added to ObjectView definitions

Benefits

- Planning and configuring sites made easier and less prone to error
- Single source of truth, as sensors are maintained only in LSC
- Ability to see site information in one place

Installing the Location system sync feature

To install the Location system sync feature:

- 1. Make sure that the SmartSpace platform includes a license for version 3.8.4 or higher.
- 2. Select the Location system sync feature in "Install Services" in Service Manager and click "Install".

For further information on all aspects of installation, see SmartSpace Installation on the Ubisense Documentation Portal or your SmartSpace Installation Guide.